


## Setting Device Feedback characteristics using the UpStream utility


- 1) Launch the UpStream utility.



- 2) Click on the FEEDBACK tab.

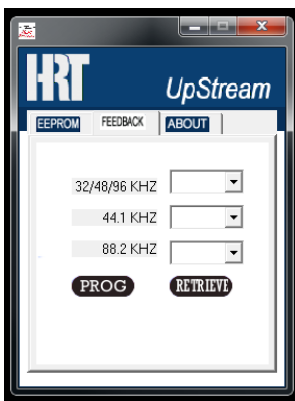

- 3) For any sample rate that you wish to change the feedback resolution, click on the pull down (down arrow) next to the sample rate group.

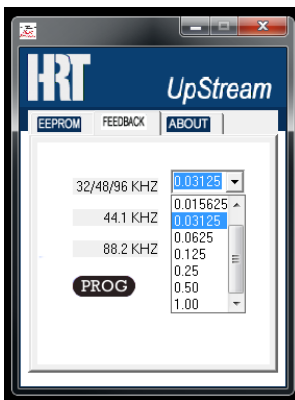

- 4) Select the new resolution value for the sample rate and program the device by using the PROG button.

When you have made changes to the feedback values for the sample rate(s) you wish to change and have programmed them to the Streamer, you may exit the UpStream utility by pressing the red X in upper right hand corner of the utility.

Should you have any questions, please feel free to email our support staff at [support@hirestech.com](mailto:support@hirestech.com)